




How to set Manual override

Introduction

With the manual override function, users can adjust the strength of manual override for autonomous driving.

Steps

1. Settings--Safety--Manual override.

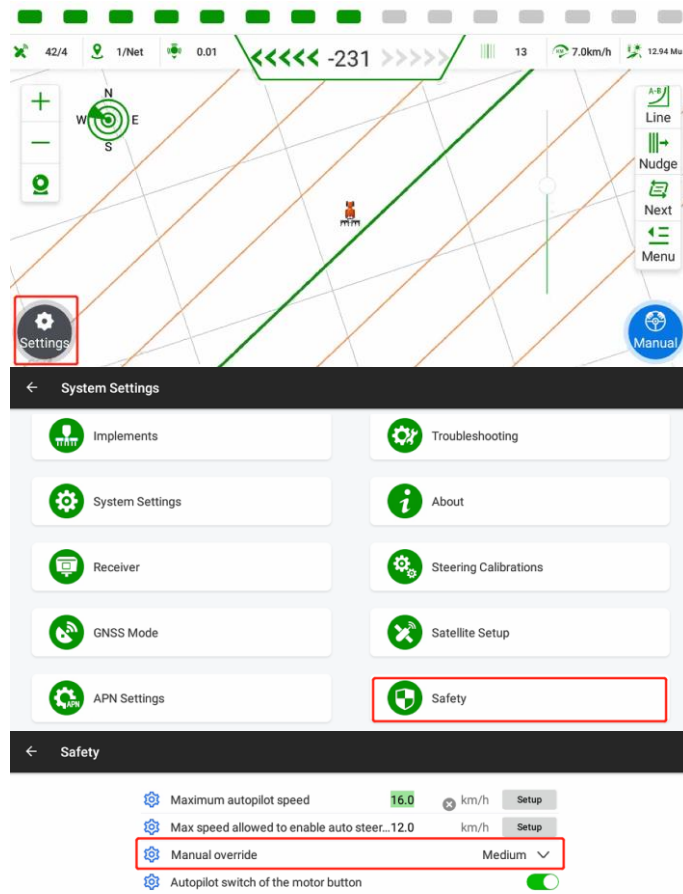

2. By default, the setting is on 'Medium,' but it can be changed to 'Simple,' 'Hard,' or 'Prohibitive.'

